

# MULTIPOINT DIMENSIONS


# CONFIGURATIONS

TOP MOUNTING SCREWS




Align this point to the top mounting screw of your multipoint product


LOCK CTC BEGINNING

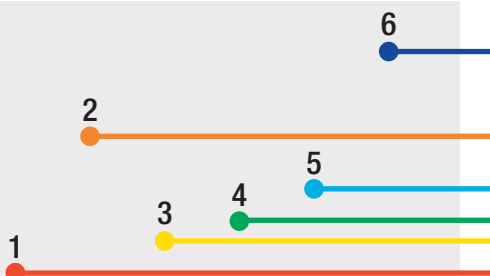

LOCK CTC END

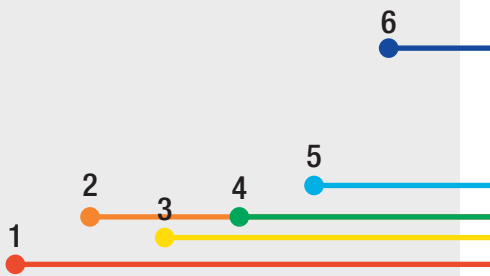

BOTTOM MOUNTING SCREWS

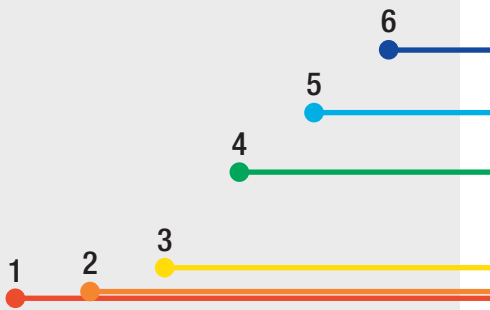

## HOW TO DETERMINE YOUR CONFIGURATION

1. Print the Multipoint Dimensions sheet. **IMPORTANT:** In Print Options, select "Actual Size" to print to the correct template size.
2. Place it beside your Multipoint setup, aligning the top line on the sheet with the top screw on your setup
3. Find the corresponding colored lines that align with the lock, lever, and bottom screw on your product
4. Determine the correct configuration based on color of the lines using the Configuration Table below
5. To double check, you can use the attached ruler to measure the total mounting length. Place the ruler next to your setup, and align the "0" with the top screw on your setup, and confirm where the bottom screw measures (dots included for easy reference).

## CONFIGURATION TABLE

Baldwin Configuration	Baldwin Portfolio	Cylinder	Position	Lock CTC	Mounting CTC
1	Estate	Profile	Below	3 5/8" (92 mm)	8 1/2"
2	Estate	American	Above	4 1/8" (105 mm)	8 1/2"
3	Estate	American	Below	3 5/8" (92 mm)	8 3/8"
4	Estate	Profile	Below	3 5/8" (92 mm)	7 7/8"
5	Estate	American	Above or Below	3 5/8" (92 mm)	7 9/16"
6	Estate	American	Above	3 5/8" (92 mm)	7 1/4"

**BALDWIN**  
ESTATE™  
MULTIPOINT 2020